

対応機種

LCD

PGM no.1	TH-32EF1J/42LF60J/47LFX6J/49LF80J
PGM no.2	PN-E421/471/521/601/602/R606/702/703/802/R903
PGM no.3	LCD4020/5020
PGM no.4	LCD-P401/P402/P403/P404/P461/X551S/X552S/P801
PGM no.5	ME32C/40C/46C/460EXn/550EXn
PGM no.6	LC-32SC1/32DS5/32H11/52EX5

PJ

PGM no.7	PT-RQ32K/RZ31K/RZ21K/RZ12K/DZ21K/DZ12000/DZ8700/DZ870
PGM no.8	PT-EX600/PT-EW530
PGM no.9	EB-Z8050W/8455WU/10000/10005U
PGM no.10	NP-P350WJL
PGM no.11	LP-XF1000/LP-XP200

PLAYER

PGM no.12	DMR-T4000<TITLE>
PGM no.13	DMR-T4000<CHAPTER>
PGM no.14	DVD-V730/V8000
PGM no.15	HD-9000

SWITCHER

PGM no.16	V-800HD/40HD
PGM no.17	VR-50HD
PGM no.18	XS-84H <PRESET>
PGM no.19	XS-84H <OUT1>
PGM no.20	XS-84H <OUT2>
PGM no.21	QVU150-3G
PGM no.22	PLS300
PGM no.23	PrePro/CO-2001
PGM no.24	ON-2000/ScreenPRO
PGM no.25	PreMASTER/PM-2002
PGM no.26	RGB-S10/SW1010
PGM no.27	MIX-DV4/VT4
PGM no.28	ISS506
PGM no.29	DGS-41A/ISS-41HD
PGM no.30	ImagePROHD/3G
PGM no.31	SL-82A <OUT1>
PGM no.32	SL-82A <OUT2>
PGM no.33	ISS-24400
PGM no.34	SW-61
PGM no.35	SW6VGArS
PGM no.36	PDS902/DCS-200 <SET>
PGM no.37	PDS902/DCS-200 <SELECT>